SAFETY INSTRUCTIONS FOR HARDWIRED PENDANT

PACKAGE CONTENTS

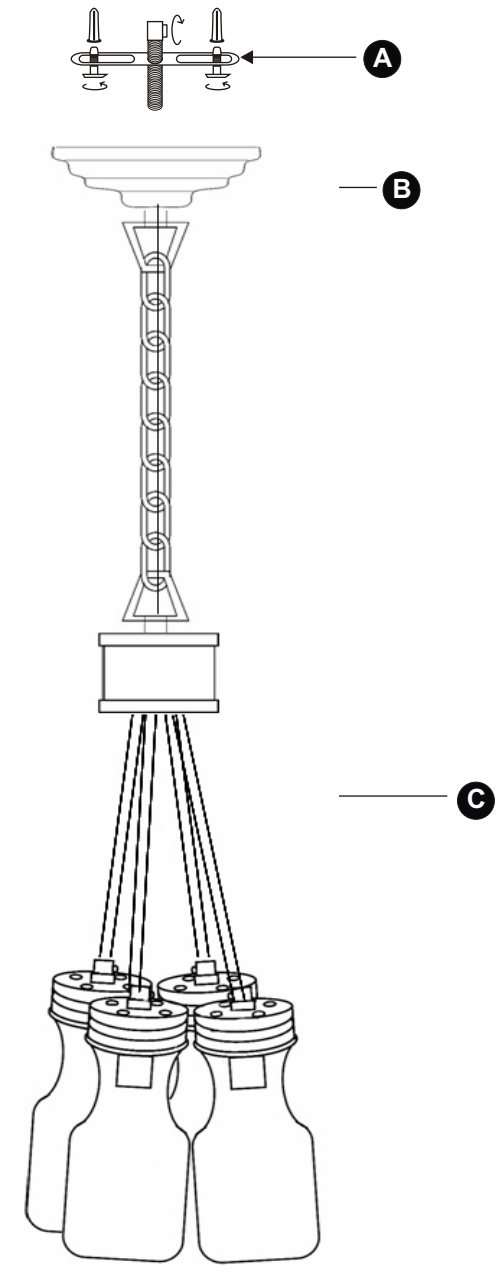

PART	DESCRIPTION	QUANTITY
A	Mounting Strap	1
B	Canopy	1
C	Pendant Lamp Set	1

HARDWARE CONTENTS

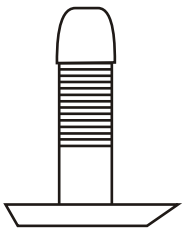

Screw

Qty.2



Screw Anchors

Qty.2

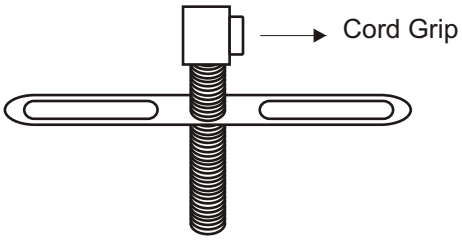

Mounting Strap

Qty.1

⚠ SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate or install the product

WARNING .

- TURN OFF ELECTRICITY at main fuse box (or circuit breaker box) before beginning installation by Removing fuse (or switching off circuit breaker)

CAUTION

- CONSULT A QUALIFIED ELECTRICIAN TO ENSURE CORRECT BRANCH CIRCUIT CONDUCTOR.
- If in doubt about electrical installation, consult a licenced electrician.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents above. If any part is missing or damaged, do not attempt to assemble the product. Contact customer service for replacement parts.

ASSEMBLY INSTRUCTIONS

- Shut off the main electrical supply from the main Fuse Box/ Circuit Breaker.
- Remove all parts from the carton. Do not throw away any parts.
- Attach the hook on one side of the chain to the Pendant Hook.
- Loosen the Cord Grip and insert the cord in the Canopy. Tighten the Cord Grip.
- Fix Hook/ Support Hardware to the Plaster/ Dry or similar ceiling properly with 10 - 12 threads.
- Carefully lower the Lamp along with the Metal Chain until themetal chain is taut. Straighten the metal chain links.
- Install light bulbs (not included). Use only 40-watt or less standard - base bulbs.

CARE AND MAINTENANCE

- Shut off the main power supply before wiping product with damp cloth or window cleaner. Do not use abrasives.
- Bulb replacement: Use 40-watt or less standard-base bulbs.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	CORRECTIVE ACTION
Bulb won't light	1. Bulb is burned out 2. Power is off 3. Faulty wire connection. 4. Faulty switch.	1. Replace light bulb. 2. Make sure power supply is on. 3. Check wiring.
Fuse blows or circuit breaker trips when light is turned on	Crossed wires or power wire is grounding out.	Check wire connections.